



**BALTIMORE  
AIRCOIL COMPANY**



## **TSC-C-D ICE CHILLER® Thermal Storage Coil only**

### **OPERATING AND MAINTENANCE INSTRUCTIONS**





# Recommended maintenance and monitoring programme

Baltimore Aircoil Company's Ice Chiller<sup>®</sup> Thermal Storage Units and Thermal Storage Coils have been developed for long, trouble-free service when installed, operated and maintained properly. To ensure optimal performance and maximum equipment life for your Ice Chiller<sup>®</sup> Thermal Storage Unit, it is important that a regular inspection/maintenance program be developed and implemented. This manual is provided as a guide to unit operation and establishing an effective maintenance program for Ice Thermal Storage systems. Included in the manual are start-up and shutdown procedures, maintenance procedures and a schedule of maintenance items and their recommended frequency for the Ice Chiller<sup>®</sup> Thermal Storage Unit and its related components. An illustration of the Thermal Storage Unit, with its major components identified, is provided in "Ice Chiller<sup>®</sup>" on page 4 All inspections, maintenance and monitoring actions should be recorded in a cooling system logbook.

As part of your maintenance record, it is advisable to have a copy of the unit's certified drawing available for reference during inspection and maintenance. If you do not have a copy of this drawing, or need further information about the unit, contact your local BAC Service provider. You can find name, e-mail and phone number on the website [www.BACService.eu](http://www.BACService.eu).

Inspections and monitoring	Start-Up	Monthly	Quarterly	Every 6 months	Annually	Shutdown
General condition	X	X				
Ice Chiller <sup>®</sup> tank	X				X	
Ice Chiller <sup>®</sup> water <sup>(1)</sup>						
- Quality	X			X		
- Level	X			X		
Ice thickness	X	X				
Coil	X					
Ice Logic™ Ice Quantity controller:						
- condition of sensor	X	X				
- conductivity of tank water	X				X	
Air pump	X	X				
- Air filter replacement					X	
Refrigerant:						
- Glycol quality				X		
- NH <sub>3</sub> purge oil				X		
Air distribution piping	X					

Cleaning procedures	Start-Up	Monthly	Quarterly	Every 6 months	Annually	Shutdown
Mechanical cleaning	X				X	X
- Air filter		X	X			
Disinfection	X				X	X

## Notes

1. Water treatment and auxiliary equipment integrated in the cooling system may require additions to the table above. Contact suppliers for recommended actions and their required frequency.
2. Recommended service intervals are for typical installations. Different environmental conditions may dictate more frequent servicing.
3. When operating in ambient temperatures below freezing, the installation should be inspected more frequently.

# Table of contents


## OPERATING AND MAINTENANCE INSTRUCTIONS



<b>1</b>	<b>Construction details</b>	<b>4</b>
	Ice Chiller®	4
<b>1</b>	<b>General information</b>	<b>5</b>
	Operating conditions	5
	Connecting pipework	5
	Safety precautions	5
	Disposal requirements	6
	Non-walking surfaces	7
	Modifications by others	7
	Warranty	7
<b>2</b>	<b>Operating instructions</b>	<b>8</b>
	Start-up and shutdown procedures	8
	Daily operating guidelines	10
	Ice Logic® Ice Quantity Controller	12
<b>3</b>	<b>Water Care</b>	<b>15</b>
	About water care	15
	Passivation	15
	Special water treatment considerations	16
<b>4</b>	<b>Cold Weather Operations</b>	<b>17</b>
	About cold weather operation	17
	Insulation of piping	17
	Protection against coil freezing	17
	Ice due to subfreezing ambients	18
<b>5</b>	<b>Maintenance Procedure</b>	<b>19</b>
	Inspections and corrective actions	19
	Cleaning procedures	21
<b>6</b>	<b>Comprehensive Maintenance</b>	<b>22</b>
	About comprehensive maintenance	22
	Prolonged outdoor stay	22
<b>7</b>	<b>Further Assistance &amp; Information</b>	<b>23</b>
	Assistance	23
	More information	23

## Ice Chiller®

### EXTERNAL MELT APPLICATION

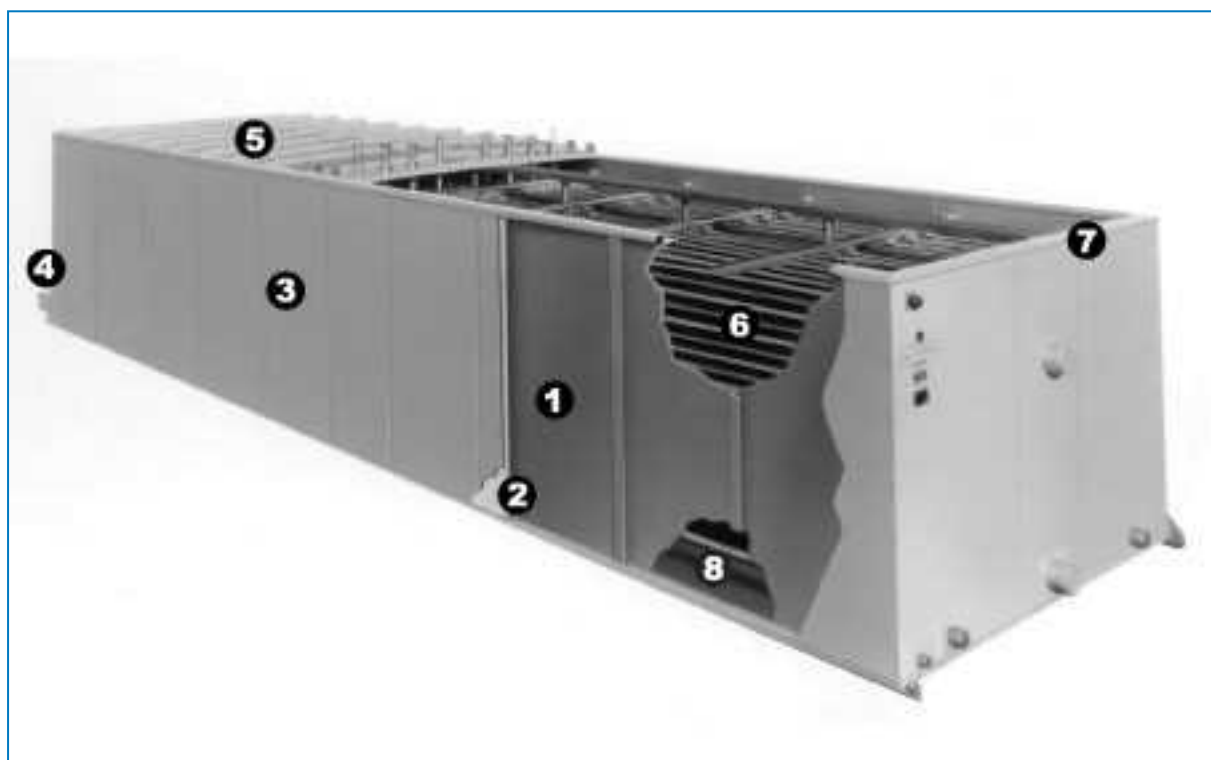

1. Tank
2. Insulation
3. Exterior panels
4. Air pump
5. Covers
6. Galvanised steel coil
7. Ice Logic™ Ice Thickness Controller (not shown)
8. Air distribution



# TSC-C-D GENERAL INFORMATION

## Operating conditions

BAC cooling equipment is designed for the operating conditions specified below, which must not be exceeded during operation.

- **Wind Load:** For safe operation of unshielded equipment exposed to wind speeds above 120 km/h installed at a height above 30 m from the ground, contact your local BAC representative.
- **Seismic Risk:** For safe operation of equipment installed in moderate and high hazard area's contact your local BAC representative.
- The coils are manufactured from black steel and hot dip galvanised after fabrication and may contain certain contaminants, such as carbon, iron oxide or welding particles.
- The installer must take the necessary precautions on site to safeguard the operation of sensitive components in conjunction with the coils.

## PURGE REQUIREMENTS

The installer of BAC equipment must ensure proper system purging of air prior to operation. Entrained air can obstruct the proper flow of glycol solution, resulting in higher operating pressures than design and reduced thermal storage capacity.

## Connecting pipework

All piping external to BAC cooling equipment must be supported separately.

All connections in the external pipework (installed by others) must be leak free and tested accordingly.

## Safety precautions

All electrical, mechanical and rotating machinery constitutes a potential hazard, particularly for those not familiar with its design, construction and operation. Accordingly, adequate safeguards (including use of protective enclosures where necessary) should be taken with this equipment both to safeguard the public (including minors) from injury and to prevent damage to the equipment, its associated system and the premises.

If there is doubt about safe and proper rigging, installation, operation or maintenance procedures, contact the equipment manufacturer or his representative for advice.

When working on operating equipment, be aware that some parts may have an elevated temperature. Any operations on elevated level have to be executed with extra care to prevent accidents.

Air piping between air pump and TSC can have temperatures above 40°C. Insulate the piping if necessary to prevent personal injury.



## AUTHORIZED PERSONNEL

The operation, maintenance and repair of this equipment should be undertaken only by personnel authorized and qualified to do so. All such personnel should be thoroughly familiar with the equipment, the associated systems and controls and the procedures set forth in this and other relevant manuals. Proper care, personal protective equipment, procedures and tools must be used in handling, lifting, installing, operating, maintaining and repairing this equipment to prevent personal injury and/or property damage. Personnel must use personal protective equipment where necessary (gloves, ear plugs, etc...)

## MECHANICAL SAFETY

Mechanical safety of the equipment is in accordance with the requirements of the EU machinery directive. Depending upon site conditions it also may be necessary to install items such as bottom screens, ladders, safety cages, stairways, access platforms, handrails and toe boards for the safety and convenience of the authorized service and maintenance personnel.

At no time this equipment should be operated without all access cover panels and access doors in place/closed and properly secured.

For more information consult your local BAC representative.

## ELECTRICAL SAFETY

All electrical components associated with this equipment should be installed with a lockable disconnect switch located within sight of the equipment.

In the event of multiple components, these can be installed after a single disconnect switch but multiple switches or a combination thereof are also allowed.

No service work should be performed on or near electrical components unless adequate safety measures are taken. These include, but are not limited to the following:

- Isolate the component electrically
- Lock the isolation switch in order to prevent unintentional restart
- Measure that no electrical voltage is present anymore
- If parts of the installation remain energized, make sure to properly demarcate these in order to avoid confusion

Fan motor terminals and connections may have residual voltage after unit shut-down. Wait five minutes after disconnecting the voltage at all poles before opening the fan motor terminal box.

## LOCAL REGULATIONS

Installation and operation of cooling equipment may be subject to local regulations, such as establishment of risk analysis. Ensure regulatory requirements are consistently met.

## Disposal requirements

Dismantling of the unit and treatment of refrigerants (if applicable), oil and other parts must be done with respect to the environment whilst protecting workers from potential risks related to exposure to harmful substances.

National and regional legislation for material disposal and protection of workers should be taken into account with regard to:

- Appropriate handling of construction and maintenance materials when dismantling the unit. In particular when dealing with materials that contain harmful substances, such as asbestos or carcinogenic substances.
- Appropriate disposal of the construction and maintenance materials and components such as steel, plastics, refrigerants and waste water according to local and national requirements for waste management, recycling and disposal.

## Non-walking surfaces

Access to and maintenance of any component needs to be performed in accordance with all local applicable laws and regulations. If the proper and required access means are not present, temporary structures need to be foreseen. Under no circumstance can one use parts of the unit, that are not designed as an access mean, unless measures can be taken to mitigate any risks that might occur from doing so.

## Modifications by others

Whenever modifications or changes are made by others to the BAC equipment without written permission of BAC, the party who has done the modification becomes responsible for all consequences of this change and BAC declines all liability for the product.

## Warranty

BAC will guarantee all products to be free from manufactured defects in materials and workmanship for a period of 24 months from the date of shipment. In the event of any such defect, BAC will repair or provide a replacement. For more details, please refer to the Limitation of Warranties applicable to and in effect at the time of the sale/purchase of these products. You can find these terms and conditions on the reverse side of your order acknowledgement form and your invoice.

## Start-up and shutdown procedures

### START-UP PROCEDURE

Before initial start-up or after prolonged shutdown, the BAC Ice Chiller<sup>®</sup> Thermal Storage Units should be thoroughly inspected and cleaned:

1. Clean all debris from the interior of the tank.
2. Flush the Ice Chiller<sup>®</sup> tank with water, then drain to remove any accumulated dirt.
3. Visually inspect the air pump for damage.
4. Connect the motor using a thermal overload motor starter.
5. Start the air pump and check for correct rotation. Also check for any unusual noise or vibration.
6. Check the voltage and current of the air blower. The current should not exceed the nameplate rating.
7. Inspect the PVC air distribution piping for cracks or other signs of damage.
8. Check the Ice Logic<sup>™</sup> ice thickness control to be sure it is securely mounted and has not been damaged. Check control wiring for proper connections.
9. Caulk around the base of the tank (caulk is provided with the unit).
10. Inspect and leak test all the components and piping of the refrigerant and/or secondary coolant system.
11. Fill the ice tank with good quality water ("About water care" on page 15) to a height of at least 25 mm above the coil. Start the water circulation pumps and check the water level again. Add water until it is at least 25 mm above the coil, which is the appropriate level when there is no ice in the tank.



#### CAUTION

**Do not overfill!**

**Overflowing the tank may damage the insulation and/or cause the operating controls to malfunction.**

12. If using a secondary coolant, charge the system with the proper industrial grade inhibited glycol solution ("Protection against coil freezing" on page 17) and ensure all air is purged from the system. Do not attempt to mix the glycol solution in the Ice Chiller<sup>®</sup> unit coil.



13. If using refrigerant, evacuate the system and charge with the specified refrigerant.



**CAUTION**

**Do not close both inlet (liquid supply) and outlet (wet return) valves on the Ice Chiller® Coils without the use of a by-pass relief around the valves. This will prevent an excess build-up of pressure in the coils as a result of expansion of the refrigerant as the coils warm up.**

14. Inspect the Baltibond® Hybrid Coating finish on the unit.

15. If the unit will be subjected to subfreezing ambient conditions, heat tape the drain and drain ball valve to prevent cracking.

**AFTER 24 HOURS**

After 24 hours of operational load, proceed as follows:

1. Check the air pump for any unusual noise or vibration.
2. Examine ice build along the tubes for even thickness and distribution after the ice build is complete. If ice build along the coil is significantly uneven, adjust glycol or refrigerant flow through each coil.



At full ice build, the ice layer on the tubes will be slightly conical, particularly for glycol feed systems.

3. Check the water level and adjust if required.



**CAUTION**

**Do not overfill!**

**Overflowing the tank may damage the insulation and/or cause the operating controls to malfunction.**

4. Adjust water distribution using balancing valves on each water inlet connection (valves to be provided by others):
  - Start with the valves on the two outermost inlets closed so all warm water is guided through the central water inlet connection.
  - Run the unit for a few cycles of ice built/melt.
  - Determine areas of ice bridging (if any).
  - If bridging occurs in certain areas, open the appropriate valves to direct more water flow to the areas of bridging. The central inlet brings warm water to the opposite of the tank, while the outermost (smaller) inlets bring warm water to the near end of the tank.
  - Readjust the valves if necessary after a few cycles, until a quite uniform melt-out ice shape is obtained. The final position of the valves depends strongly on the water flow rate and the load profile.

**(SEASONAL) SHUT-DOWN PROCEDURE**

The following procedures should be performed when the Ice Chiller® Thermal Storage Unit is to be shutdown for an extended period of time.

1. If using direct refrigerant, pump out the Ice Chiller® Thermal Storage Coils and store the refrigerant in the high pressure receiver.

2. Allow any ice present on the tubes of the Ice Chiller<sup>®</sup> Coils to melt. If the tank is located outdoors or in an unheated area and there is a possibility of the water in the tank freezing, drain the tank and all exposed water piping. If freezing is not a problem, the tank does not need to be drained and full melt out is not necessary.
3. If the tank is drained, leave the drain connection open to allow any water that might enter the tank to drain out.
4. Properly position the insulated tank covers to minimize dirt and debris accumulation within the tank.

## Daily operating guidelines

The Ice Chiller<sup>®</sup> Thermal Storage Coils typically run in either an Ice Build or Ice Melt mode of operation. On external melt applications, the BAC Ice Logic<sup>™</sup> ice thickness controller is provided to control compressor/glycol chiller operation as a function of ice thickness. The basic sequence of operation and control points for each of these modes is described below. Each system design is unique and variations in the operating modes may occur. If you have any questions about application of the operating sequences listed below, please contact your BAC Balticare representative to review your specific application.

Since the Ice Logic<sup>™</sup> ice quantity controller can only measure the ice thickness at the point where the sensors are installed, it is necessary to regularly inspect if the ice is built evenly on all the ice coils. During ice melt-out, it is typical to see some non-uniformity of the ice pattern. The ice pattern can be considered normal when no significant horizontal bridging (blockage) is apparent in the unit at the end of the ice build cycle and when low leaving temperatures are obtained.

### ICE BUILD - DIRECT REFRIGERANT FEED

1. Begin the ice build cycle upon receiving a signal from the plant control system. Usually, this signal is triggered by a time clock indicating the start of the available ice build time.
2. Turn on the air agitation blower(s) feeding the ice storage tank.
3. On coils fed by pump recirculation, open the wet suction return valves, then any liquid feed valves installed at the Ice Chiller<sup>®</sup> Coils.
4. Turn on the compressors and refrigerant feed system.
5. After the first three hours of ice build, it is suitable to turn off the air agitation blower(s).
6. In response to a signal from the plant control system, stop the ice build cycle. The signal to end the ice build cycle can come from a number of sources. Typical examples follow:
  - The ice thickness control



The ice thickness control is a safety control and must override all other controls to prevent damage to the coils.

- A control system time clock.
7. Close the refrigerant feed valves, then close the refrigerant suction or wet return valves.
  8. Turn off the refrigeration system.
  9. The Ice Chiller<sup>®</sup> Coils are now charged and available to provide cooling.

### ICE BUILD - SECONDARY COOLANTS

1. Begin the ice build cycle upon receiving a signal from the plant control system. Usually, this signal is triggered by a time clock indicating the start of the available ice build time.
2. Open any glycol inlet and outlet valves installed at the Ice Chiller<sup>®</sup> Unit Coils.



If both inlet and outlet glycol valves are used on the Ice Chiller<sup>®</sup> Coils, the design must allow for a bypass relief around the valves. This will prevent an excess build-up of pressure in the coils as a result of the expansion as glycol in the coils warms up.

3. Turn on the glycol circulating pump(s) to establish flow between the glycol chiller(s) and the Ice Chiller<sup>®</sup> Unit.
4. Turn on the air agitation blower(s) feeding the ice storage tank.

5. Once glycol flow has been established, turn on the glycol chiller(s). Follow the chiller manufacturer's start-up procedures and safeties.
6. After the first three hours of ice build, it is suitable to turn off the air agitation blower(s).
7. In response to a signal from the plant control system, stop the ice build cycle. The signal to end the ice build cycle can come from a number of sources. Typical examples follow:
  - The ice thickness control



The ice thickness control is a safety control and must override all other controls to prevent damage to the coils.

- A control system time clock.
  - A kW counter that indicates a stored input equal to the preceding day's melted output.
8. Turn off the glycol chiller(s) and glycol pump(s) and close the inlet valves to the Ice Chiller® Coils.



If both inlet and outlet glycol valves are used on the Ice Chiller® Coils, the design must allow for a bypass relief around the valves. This will prevent an excess build-up of pressure in the coils as a result of the expansion as glycol in the coils warms up.

9. The Ice Chiller® Coils are now charged and available to provide cooling.

## ICE MELT

1. Begin the ice melt cycle upon receiving a signal from the plant control system. Usually, this signal is triggered by a cooling load to be handled by the stored ice.
2. Open any chilled water inlet and outlet valves installed at the ice storage tank.
3. Turn on the air agitation blower(s) feeding the ice storage tank.
4. Turn on the circulating chilled water pump(s) to establish flow between the ice storage tank and the cooling load.
5. Upon receiving a signal from the plant control system to stop the ice melt cycle, turn off the chilled water pump(s) and the air agitation blower(s), and close the chilled water inlet and outlet valves to ice storage tank.
6. The signal to end the melt cycle can come from a number of sources. Typical examples follow:
  - A time clock.
  - A signal that the cooling load has been satisfied.
  - A kW counter that indicates the maximum cooling for the day has been drawn from the storage tank.
7. The Ice Chiller® Coils are now ready to be recharged following the ice build procedures above.



Full melt-out after every cycle results in minimum energy consumption.

When the required melt performance cannot be obtained due to significant horizontal ice bridging, melt the ice completely during the next cycle. Full melt-out can be detected by 0% ice display on the Ice Logic™ Ice Thickness Controller combined with a rapidly increasing water leaving temperature.

To minimize the possibility for ice bridging, operating according to the following guidelines:

- Limit the cooling load through the TSU-C/D during ice build to less than 15% of the installed compressor capacity.
- Maintain a constant high water flow on the TSU-C/D during melt-out. The corresponding temperature difference between entering and leaving water should be kept as low as possible to minimize conical melt-out pattern (10°C maximum).
- Try to melt out the TSU-C/D completely at the end of each cooling cycle by limiting the amount of ice build to the expected cooling load. For multiplier TSU-C/D installations, a melt-out in sequence assures at least one full melt-out at regular intervals. Full melt can be detected by 0% ice display on the Ice Logic™ Ice Thickness Controller combined with a rapidly increasing leaving water temperature.
- To increase control flexibility, use 1 additional Ice Logic™ Ice Quantity Controller on a 4 coil unit (available as an option).

## Ice Logic® Ice Quantity Controller

The ice quantity in the Ice Chiller® Unit will be measured by means of a sensor measuring the ice thickness. The measurement is done in steps of 20%: 0, 20, 40, 60, 80 and 100% of the **nominal ice storage capacity** of the ICE CHILLER® unit.




Ice Logic™

The control panel at the connection end of the unit has following features:

- A maximum ice quantity setting knob to select the maximum required ice quantity.
- A minimum ice quantity setting knob to select the minimum ice quantity before the chiller should start again.
- An override switch to start/stop cooling machine.
- Ice quantity indication LED's to show ice quantity available.

Other control devices such as time clocks and water temperature sensors must be provided by others.

### ICE LOGIC™ SENSOR

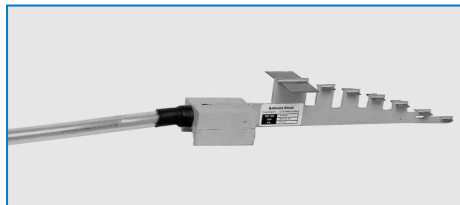


A series of accurately positioned electrodes detect the ice thickness on the coil tube. The measurement is based on the difference in electrical conductivity between ice and water. The Ice Logic™ ice quantity controller combined with this sensor permits to limit the maximum ice thickness to typically 35 mm.

### ICE LOGIC™ CONTROL PANEL

The Ice Logic™ ice quantity controller can be operated either manually, by remote control using the 6 NO contacts, or by using an analog output signal of 4-20 mA (available as an option).


## Manual Control

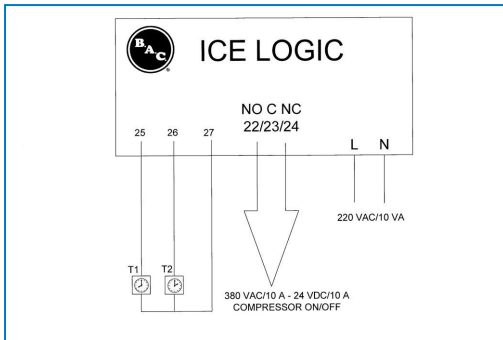

The required ice quantity for the next cooling cycle can easily be set from the control panel in steps of 20%. In addition, the minimum ice quantity, before the cooling equipment should start again, can be set from the minimum % ice knob. If a minimum of 0% is selected, the compressor will not be allowed to start before all ice is melted. Use contact 22/23 NO or 23/24 NC to start or stop the compressor as a function of predetermined minimum and maximum ice quantity.

An additional switch on the control panel allows to force a compressor start or stop, when actual ice quantity is between preset minimum and maximum level. Instead of using the switch, the contacts 25/26/27 can be used. A short circuit of 1 sec. between 25/27 makes the compressor start, a short circuit between 26/27 makes the compressor stop.

## Remote Control via PLC or Computer

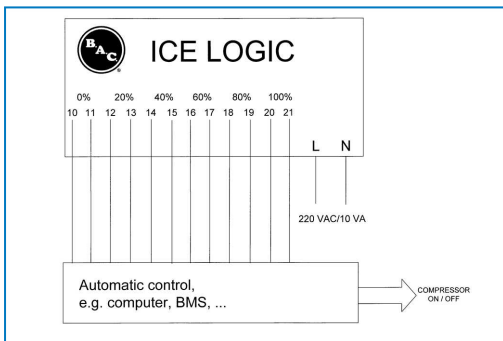


The Ice Logic™ ice quantity controller has six output contacts (NO) which can be used to control the cooling equipment. These contacts are normally open and will close when the desired ice quantity is reached.

- contact 10-11 closes at 0% ice and more
- contact 12-13 closes at 20% ice and more
- contact 14-15 closes at 40% ice and more
- contact 16-17 closes at 60% ice and more
- contact 18-19 closes at 80% ice and more
- contact 20-21 closes at 100% ice

Contacts open again when the % ice is below the corresponding level.

## Remote Control with 4-20 mA Output Signal (Option)

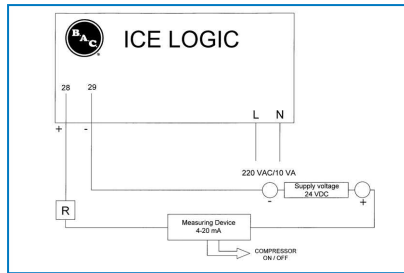

Instead of 6 output signals for remote control, an analog output signal of 4-20 mA can be generated using contacts 28/29. The customer must provide a 24 VDC supply voltage with a loop resistance of max. 600 Ohms (see R). In that case contacts 10 to 21 are no longer available. Contact 28 should be connected to the positive, 29 to the negative signal of the supply voltage.

The analog signal can have only 7 different values:

4 mA	no ice
4.5 mA	0-20 % ice
7.2 mA	20-40 % ice
10.4 mA	40-60 % ice
13.6 mA	60-80 % ice
16.8 mA	80-100 % ice
20 mA	100 % ice

There will be no intermediate mA output as measurement is based on a 6 step measurement only.

### Electrical specification

Control panel: IP55 execution

Supply voltage: 230 VAC (220/240 VAC)/10 VA, max. cable section 2.5 mm<sup>2</sup>.

Output contacts:

1. to automatic control system:
  - 6 NO contacts close if corresponding ice quantity is reached (0, 20, 40, 60, 80, 100%)
  - 110 VAC/0.5 A or 24 VDC/1 A, max. cable section 1.5 mm<sup>2</sup>.
2. for manual compressor/chiller control:
  - NO/NC contact closes/opens if compressor or chiller operation is required.
  - 380 VAC/10 A or 24 VDC/10 A, max. cable section 2.5 mm<sup>2</sup>.

### About water care

In the near freezing temperatures of the Ice Chiller® Thermal Storage Unit, scale and corrosion are naturally minimized. Therefore, for the tank water, a water treatment program to prevent scale or corrosion is not normally needed, unless the water is corrosive in nature. To control biological growth, a biocide may be needed on a periodic basis to prevent the growth of corrosive bacteria. In general, BAC recommends the following guidelines. (See table below).

	Recommended tank water quality
pH	7.0 to 9.0 *
Hardness (as CaCO <sub>3</sub> )	90 to 500 mg/l
Alkalinity (as CaCO <sub>3</sub> )	500 mg/l max.
Total dissolved solids	1000 mg/l max.
Chlorides	125 mg/l max.
Sulfates	125 mg/l max.
Conductivity	100-700 µS/cm

#### Water quality guidelines

\* Tank water pH of 8.2 or higher will require periodic passivation of the galvanized steel coils to prevent "white rust", the accumulation of white, waxy, non-protective zinc corrosion products on galvanized steel surfaces.



#### CAUTION

**Do not treat the tank water with chemicals that alter the freeze point of water.**

### Passivation

When new systems are first commissioned, special measures should be taken to ensure that galvanized steel surfaces are properly passivated to provide maximum protection from corrosion. **Passivation** is the formation of a protective, passive, oxide layer on galvanized steel surfaces.



To ensure that galvanized steel surfaces are passivated, for the first 6-8 weeks of operation, the pH of the tank water should be maintained between 7.0 and 8.2 and calcium hardness maintained between 100 and 300 mg/l (as CaCO<sub>3</sub>). The passivation is complete and effective when the new zinc surfaces turn dull grey in colour. If white deposits form on galvanized steel surfaces after the pH is returned to normal, this is a sign of white rust, and therefore, the passivation process should be repeated to insure proper passivation and maximum corrosion resistance.

In case that your water quality does not allow the pH to remain below 8.2, then you should consult a water treatment specialist for advice on pH reduction or special passivation agents to promote proper passivation.

## Special water treatment considerations

### ICE TANK WATER

- Since ice tanks can be on and off during the course of the year, it is possible for microbiological growth to develop. Therefore, the best practice hygiene recommendation is for a dosage of non-oxidizing biocide once/year. If the unit is an external melt, the biocide should be added after the unit is brought down for cleaning and during the refill process, to insure proper mixing.
- Following passivation, if the tank water is corrosive in nature (low hardness, low pH or alkalinity), the addition of a corrosion 'non-precipitating' corrosion inhibitor is recommended. Examples of 'non-precipitating' corrosion inhibitors are nitrites, molybdates and silicate based blends. Care must be taken not to use corrosion inhibitors that raise the conductivity > 700 µS/cm, or alter the freezing point of the water. Therefore, such decisions need to be taken with the advice of a water treatment specialist. For example, if the ice water needs food grade approval because it could contaminant food products, then the silica based treatment programme is normally used, if it meets food grade regulations.

### GLYCOL SIDE OF THE ICE COIL

- Only use "inhibited" glycol that contains pH buffers. Never use industrial grade ethylene glycol. The reason for this recommendation is that over time, glycol degrades and produces "glycolic acid" as a result. These acids reduce the pH of the circulating water, and this will cause corrosion of steel materials of construction.
- As an added protection, the glycol loop should be treated with a nitrite, molybdate or silicate-based corrosion inhibitor to promote metal passivation, and provide additional alkalinity to raise the pH above 9.0. Always consult a water treatment specialist for recommendations on which corrosion inhibitor is most effective for your specific water quality



# 4

## TSC-C-D COLD WEATHER OPERATIONS

### About cold weather operation

BAC equipment can be operated in subfreezing ambient conditions provided the proper measures are taken:

1. Insulation of piping.
2. Protection against coil freezing.
3. Elimination of ice due to sub-freezing ambient.

Listed below are general guidelines which should be followed to minimize the possibility of freeze-up. As these guidelines may not include all aspects of the anticipated operation scheme, system designer and operator must thoroughly review the system, location of the equipment, controls and accessories to ensure reliable operation at all times.

### Insulation of piping

Precautions must be taken to protect the associated piping from freezing conditions. Heat tracing and insulation should be installed on all piping connected to the unit to prevent cracking.

### Protection against coil freezing

When operated with a fluid as heat transfer medium, Ice Thermal Storage coil(s) must be protected from damage by freezing of the fluid inside the coil(s) when in operation. Freeze protection must be obtained by the use of ethylene or propylene glycol or other anti-freeze solutions in appropriate concentrations.

Ice Thermal Storage installations typically use a 25% (by weight) solution of industrially inhibited ethylene glycol for both corrosion and freeze protection. The systems lowest operating temperature should be at least 3°C to 4°C above the anti-freeze solution freeze point. Uninhibited ethylene glycol and automotive antifreeze solutions are NOT to be used in Ice Thermal Storage coil(s).

The table below indicates the freeze protection range for various ethylene glycol concentrations (% by volume).

% Ethylene	Freeze protection
20%	-10°C
30%	-16°C
40%	-25°C
50%	-39°C

*Freeze protection of ethylene glycol solutions*



Glycol systems require specific inhibitors compatible with the materials of construction they come into contact with. These inhibitors generally come pre-mixed with the glycol additive for the cooling circuit.

## Ice due to subfreezing ambients

Ice Chiller® tanks that have been exposed to severe or sustained subfreezing ambient temperatures, should be checked before initiating an ice build cycle. Ice created by subfreezing ambient temperatures which accumulates at the top of the tank and around the walls must be melted out before initiating a build cycle. This ice can prevent normal water displacement during the build cycle, possibly leading to physical damage to the coil and tank walls.



# TSC-C-D MAINTENANCE PROCEDURE

## Inspections and corrective actions

### GENERAL CONDITION OF THE EQUIPMENT

The inspection should focus on following areas:

- damage of corrosion protection
- signs of scale formation or corrosion
- accumulation of dirt and debris
- presence of biofilms

Smaller damages of the corrosion protection **MUST** be repaired as soon as possible to prevent the damage from getting bigger. For Baltibond<sup>®</sup> hybrid coating use kit (part number RK1057). Larger damages should be reported to the local BAC representative.

If there is evidence of scale formation (more than 0,1 mm) or corrosion, water treatment regime must be checked and adjusted by the supplier.

Any dirt and debris need to be removed following the "Cleaning Procedures" on page 1 .

If there is evidence of biofilms the system, including piping should be drained, flushed and cleaned of slimes and other organic contamination. Refill system with water and apply biocide shock treatment. Check pH value and functionality of ongoing biocide treatment.

### ICE CHILLER<sup>®</sup> TANK

All Ice Chiller<sup>®</sup> Thermal Storage Units are provided with sectional insulated tank covers, which, when kept in place, will minimize the accumulation of trash or debris in the tank.

However, an ICE CHILLER<sup>®</sup> unit installed outdoors may be susceptible to dust infiltration. Therefore, it is necessary to inspect the tank regularly to determine whether or not it needs to be cleaned. To clean the tank, drain it and flush with fresh water.

### ICE CHILLER<sup>®</sup> WATER LEVEL

On a monthly basis and at seasonal start-up, inspect the water level in the tank. To properly check the water level in the tank, **the ice must be completely melted.**

The water level in the Ice Chiller<sup>®</sup> tank should be maintained 25 mm above the height of the coil (no ice on coil). As ice is built on the Ice Chiller<sup>®</sup> coil, the level of the water in the tank will rise slightly.

Therefore, the level of water should be observed at its lowest point, **when there is no ice on the coil.** If the tank level drops to less than 25 mm above the height of the coil, use the make-up connection provided (see certified print) to bring the water level in the tank up to the recommended operating level.

### COIL

The coil should be observed when there is no ice on the coil.

1. Inspect the coil for
  - obstructions



- damages
- corrosion
- fouling

## 2. Remove any obstructions from the coil

Any damages or corroded areas need to be repaired. Call your local BAC representative for assistance. Minor fouling can usually be removed chemically or by temporary changes to the water treatment programme. Contact your water treatment supplier for advice. Major fouling requires cleaning and flushing according to the "Cleaning procedures" on the facing page. Regular checking of the total aerobic bacteria count (TAB) and maintaining it within acceptable levels are the key to prevent fouling.

## ICE LOGIC™ ICE QUANTITY CONTROLLER

Check monthly the control sensors for any visual signs of damage.

## AIR PUMP

The air pump assembly is designed to provide air to the Ice Chiller® Thermal Storage Unit for tank water agitation. The air pump should run as a minimum during the first 3 hours of ice build to ensure a homogenous water temperature in the tank. For applications with limited cooling requirements during the ice build (< 15% of installed compressor capacity), the air pump must run continuously during the ice build. To ensure high melt out rates, continuous air pump operation during melt off is required.

The air blown in the Ice Chiller® Unit will entrain in the water piping and can accumulate in the upper part if the outlet piping is located above the operating water level. In these installations an air vent must be provided at the highest point of the piping.

The air pump is designed to require little maintenance, but some guidelines should be followed to assure trouble-free operation.

1. Do not run the blower with air supply line closed or low flow condition. This will cause a temperature rise in the blower casing. Allow adequate space around the air pump for unobstructed flow of air.
2. Check and clean the air filter once a month and change the filter every 3000 operating hours or at least every year.
3. The air pump bearings are permanently greased and sealed and require no maintenance.



## GLYCOL

Every six months, or at the seasonal start-up, draw a sample of the glycol solution from the system and check the concentration using a refractometer. If necessary, adjust the concentration using the proper type of industrially inhibited glycol.

## REFRIGERANT

Every 6 months, or as necessary, purge refrigerant oil from the coil, using the purge connections provided (see certified print).

## AIR DISTRIBUTION PIPING

Inspect the PVC air distribution piping for cracks or other signs of damage at initial and seasonal start-up.

# Cleaning procedures

## MECHANICAL CLEANING

Keeping your thermal storage equipment clean will maintain its efficiency and help to prevent uncontrolled bacteriological growth. The recommended annually cleaning procedures are described below:

1. Remove the insulated tank covers.
2. Drain the tank.
3. Clean any debris from tank.
4. Flush the tank with clean water and drain to remove accumulated dirt.
5. Close drain. (For seasonal shut-down leave the drain connection open to allow any water that might enter the tank to drain out.)
6. Fill the tank with clean water (see operating instructions)
7. Properly position the insulated tank covers to minimize dirt and debris accumulation within the tank.



### CAUTION

**Clean the air filter once a month.**

## DISINFECTION

Disinfection of your cooling system may be needed in case of high concentration of aerobic bacteria and/or Legionella. Disinfection is also recommended for evaporative cooling systems with known or suspected high bacteriological levels, prior to a cleaning procedure.

Some local or national guidance also recommends disinfection prior to initial start up, after a prolonged shut down, after routine cleaning operations or when significant alterations have been made to the cooling system. Disinfection must be carried out in accordance with a proper procedure and take into account the safety of the cleaning and disinfection staff.

Typically disinfection is achieved using a sodium hyperchloride solution to maintain a residual value of 5 - 15 mg/l of free chlorine and circulate this around the system for up to 6 hours. Higher chlorine levels for a shorter period are possible, but require a higher level of corrosion protection than galvanized steel only. Consult your BAC Balticare representative for further information.

Excessive levels of chlorine must be avoided as this quickly can lead to corrosion and damage to your system. Chlorinated water should be de-chlorinated before draining and after disinfection the system must be thoroughly flushed through with clean water.



A proper regularly monitored biocide programme reduces the need for cleaning and disinfection actions significantly.

## About comprehensive maintenance

In order to ensure maximum efficiency and minimum downtime of your evaporative cooling system, it is recommended to establish and execute a programme of preventive maintenance.

Your local BAC representative will assist you in establishing and implementing such programme. The preventive maintenance programme must not only avoid that excessive downtime occurs under unforeseen and unwanted conditions, it also ensures that factory authorized replacement parts are used, which are designed to fit and for their purpose carry the full factory warranty. To order factory authorized parts, contact your local BAC representative. Make sure you include the unit serial number when ordering any parts.

## Prolonged outdoor stay

Should the unit(s) be stored outside prior to installation and/or start-up for approximately one month (shelf life) or longer, or stored in severe climates, it is imperative that certain actions be performed by the installing contractor in order to maintain the unit in "as shipped" condition.

- Check tank. Ice created by subfreezing ambient temperatures, which accumulates at the top of the tank and around the walls must be melted out before initiating a build cycle. This ice can prevent normal water displacement during the build cycle, possibly leading to physical damage to the coil and tank walls. The water temperature in the tank should be raised to 5°C to ensure that all ice is melted.
- Coils of BAC Ice Thermal Storage Units are filled with a low pressure inert gas at the factory before shipping to ensure an optimal internal corrosion protection during transport or prolonged storage. It is recommended to check the overpressure every six months (connect a manometer to the valve).

For complete instructions, please contact your local BAC representative.



TSC-C-D

# FURTHER ASSISTANCE & INFORMATION

## Assistance

BAC has established a specialized total care company called Balticare. The BAC Balticare offering involves all elements required to ensure a safe and efficient operation of your evaporative cooling products.

For more details, contact your local BAC representative for further information and specific assistance at [www.BaltimoreAircoil.eu](http://www.BaltimoreAircoil.eu)

## More information

### REFERENCE LITERATURE

- Eurovent 9-5 (6) Recommended Code of Practice to keep your Cooling System efficient and safe. Eurovent/Cecomaf, 2002, 30p.
- Guide des Bonnes Pratiques, Legionella et Tours Aéroréfrigérantes. Ministères de l'Emploi et de la Solidarité, Ministère de l'Economie des Finances et de l'Industrie, Ministère de l'Environnement, Juin 2001, 54p.
- Voorkom Legionellose. Ministerie van de Vlaamse Gemeenschap. December 2002, 77p.
- Legionnaires' Disease. The Control of Legionella Bacteria in Water Systems. Health & Safety Commission. 2000, 62p.
- Hygienische Anforderungen an raumluftechnische Anlagen. VDI 6022.

### INTERESTING WEBSITES

- [www.BaltimoreAircoil.eu](http://www.BaltimoreAircoil.eu)
- [www.BACservice.eu](http://www.BACservice.eu)
- [www.eurovent-certification.com](http://www.eurovent-certification.com)
- [www.ewgli.org](http://www.ewgli.org)
- [www.ashrae.org](http://www.ashrae.org)
- [www.uniclima.org](http://www.uniclima.org)
- [www.aicvf.org](http://www.aicvf.org)
- [www.hse.gov.uk](http://www.hse.gov.uk)

### ORIGINAL DOCUMENTATION



This manual is originally made in English. Translations are provided for your convenience. In the event of discrepancies, the English original text shall prevail over the translation.



A series of horizontal dotted lines for writing, spanning the width of the page.





A series of horizontal dotted lines for writing, spanning the width of the page.



A series of horizontal dotted lines for writing, spanning the width of the page.





A series of horizontal dotted lines for writing, spanning the width of the page.



A series of horizontal dotted lines for writing, spanning the width of the page.





A series of horizontal dotted lines spanning the width of the page, intended for handwritten notes or data entry.

COOLING TOWERS

---

CLOSED CIRCUIT COOLING TOWERS

---

ICE THERMAL STORAGE

---

EVAPORATIVE CONDENSERS

---

HYBRID PRODUCTS

---

PARTS, EQUIPMENTS & SERVICES

BLUE by nature  
GREEN at heart



[www.BaltimoreAircoil.eu](http://www.BaltimoreAircoil.eu)

[info@BaltimoreAircoil.eu](mailto:info@BaltimoreAircoil.eu)

Please refer to our website for local contact details.

Industriepark - Zone A, B-2220 Heist-op-den-Berg, Belgium

© Baltimore Aircoil International nv